



Model Number


UBE1500-F64-SE0-V3

Features

- Reliable detection of transparent materials
- High switching frequency
- Small angle of divergence
- Small, compact design
- Plastic housing
- Emitter and receiver included in the delivery package

Curves

Characteristic response curves

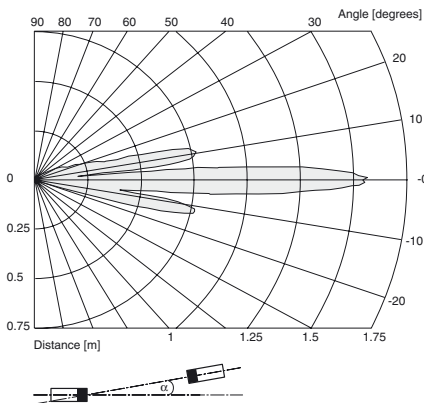

Technical data

General specifications

Sensing range	0 ... 1500 mm , distance emitter-receiver 20 mm ... 1500 mm
Transducer frequency	200 kHz
Reference target	receiver

Indicators/operating means

LED yellow	indication of the switching state (receiver)
------------	--

Electrical specifications

Operating voltage U_B	18 ... 30 V DC , ripple 10 % _{SS}
No-load supply current I_0	20 mA receiver 12 mA emitter

Output

Output type	1 switch output E0, npn NO
Rated operational current I_e	50 mA
Voltage drop U_d	≤ 0.5 V
Switch-on delay t_{on}	< 5 ms
Switching frequency f	120 Hz

Ambient conditions

Ambient temperature	0 ... 60 °C (273 ... 333 K)
Storage temperature	-40 ... 85 °C (233 ... 358 K)


Mechanical specifications

Protection degree	IP54
Connection	V3 connector (M8 x 1), 3 pin
Material	
Housing	PA 6.6
Mass	80 g per device

Compliance with standards and directives


Standard conformity	
Standards	EN 60947-5-2:2007 IEC 60947-5-2:2007

Dimensions

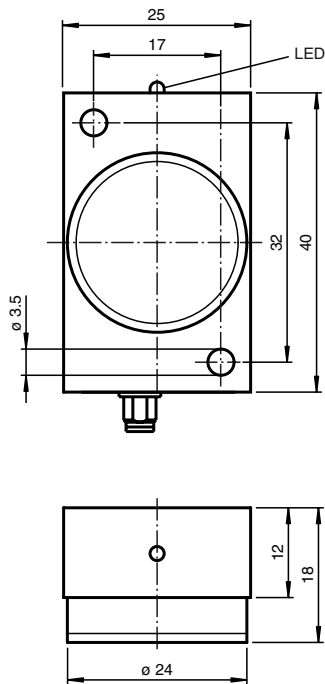

Additional Information


Mounting/Adjustment

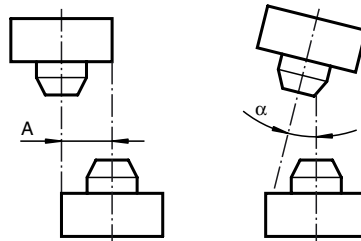

Parallel displacement
A ≤ 8 mm

Angle displacement
 $\alpha \leq 5^\circ$


Thin foil detection

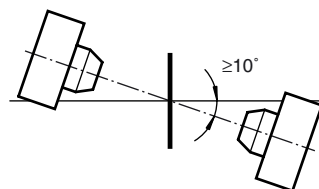


Electrical Connection

Standard symbol/Connection:

 
Receiver: version E0, npn



Receiver: version E2, pnp

 

Emitter:

 

Core colours in accordance with EN 60947-5-2.

Pinout

Connector V3



Function

A through-beam ultrasonic barrier always consists of a single emitter and a single receiver. The function of a through-beam ultrasonic barrier is based in the interruption of the sound transmission to the receiver by the object to be detected. The emitter sends an ultrasonic signal that is evaluated by the receiver. If the signal is interrupted or muted by the object to be detected, the receiver switches. No electrical connections are required between the emitter and receiver. The function of through-beam ultrasonic barriers is not dependent on the position of their installation. We recommend, however, to install the emitter below in the case

of vertical installations to prevent the accumulation of dust particles.

Installation tolerances

The installation tolerances of the central axes of the emitter and receiver may not exceed the values specified in the illustration.

Detection of thin foils

For the detection of thin foils (< 0.1 mm), install the through-beam ultrasonic barrier at an angle of $\geq 10^\circ$ from perpendicular to the foil.

Caution

Mount or replace emitter and receiver only in pairs. Both devices are optimally matched to each other by the manufacturer.

Accessories

Mating connectors

V3-GM-5M-PUR

V3-WM-2M-PUR

For further information refer to chapter „Accessories“.