



Powering Business Worldwide

pe.eaton.com

XT Manual Motor Protection Accessories - Indicating Auxiliary Contact

XTPAXSATR20

Dimensions:

- **Height:** X
- **Length:** X
- **Width:** X

Notes: Can be fitted on the right side of manual motor protectors and combined with standard auxiliary contacts. General Trip indication (overload) B. Short-circuit trip. Local short-circuit indication by red indicator, manually resettable.

Warranties: No Data

Specifications:

- **Special Features:** Side
- **Type:** Accessory
- **Contact Configuration:** 2NO
- **Indicator:** Trip indicator
- **Quantity:** 2

Supporting documents:

- [Eatons Volume 5-Motor Control and Protection](#)
- [XTPAXSATR 2D Drawing Xchange](#)
- [Eaton Specification Sheet - XTPAXSATR20](#)
- [XTPAXSATR 2D PDF](#)
- [XTPAXSATR 3D Inventor](#)
- [XTPAXSATR AutoCAD 2D Footprint \(mm\)](#)
- [XTPAXSATR 3D Model Xchange](#)
- [XTPAXSATR AutoCAD 2D Footprint](#)
- [Global Data Sheet - XTPAXSATR20](#)

Certifications: No Data

Product compliance: No Data



