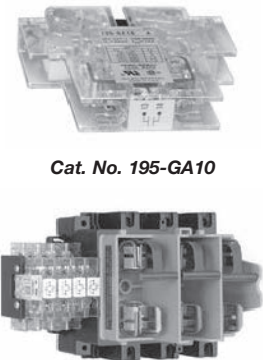



Auxiliary Contacts*

	Disconnect Switch Dim Ref.	Description	No. of Auxiliary Contacts	Cat. No.
 <p>Cat. No. 195-GA10</p>	C1, C2, D1, D2, E1, E2, F1, F2	Auxiliary contact (side-mounted)‡	1 N.O.	195-GA10
			1 N.C.	195-GA01
	C1, C2, D1, D2, E1, E2, F1, F2	Two-pole auxiliary contact for disconnect switch‡	1 N.O./1 N.C.	195-GA11
	C1, C2, D1, D2, E1, E2, F1, F2	2 N.O.‡	2 N.O.	195-GA20
	C1, C2, D1, D2, E1, E2, F1, F2	Two-pole N.C. auxiliary contact for disconnect switch‡	2 N.C.	195-GA02
	C1, C2, D1, D2, E1, E2, F1, F2	Auxiliary support for 5...8 circuits per switch	—	194R-A1

* See page 2-489 for contact ratings.

‡ A maximum of four (4) contact blocks (8 auxiliary contacts) can be installed on each disconnect switch. When more than two (2) contact blocks are used, a support kit **Cat. No. 194R-A1** must be used.

Shorting Links For BS Switches Only

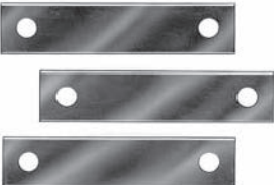	Disconnect Switch Dim Ref.	Description	For Use with Cat. No.	Cat. No.
	D1	BS88 Size A4	194R-NA400P3	194R-SLA4
	E1	BS88 Size B1, B2	194R-NB200P3	194R-SLB2
	F1	BS88 Size B3, B4	194R-NB300P3	